

3 Door Set

1.8M - 1790mm W x 2054mm H 2.1M - 2090mm W x 2054mm H 2.4M - 2390mm W x 2054mm H

Assembly Instructions



IMPORTANT

About your folding sliding internal room divider set

All products must be installed in accordance with accepted good trade practice (and in accordance with supplied instructions where applicable), and maintained in accordance with these procedures or else the warranty shall be void.

Important information

- We recommend that a competent tradesperson install this product.
- A single person must *never* carry out the installation, as some components are very heavy.
- The Outer-Frame Head requires fixing to the building lintel over the opening. The lintel *must* be capable of carrying the load of the door in all conditions. If in doubt consult a structural engineer.

Automatic Closures and Operators

• The hardware systems are designed for manual operation. Poorly adjusted automatic operator closers can import significant destructive forces to tracks, bearings and stops. Such hardware used in installations is expressly excluded from warranty terms.

Care of doors and frames on site

- Please check doors, frame and cill at the time of delivery to ensure that they are acceptable and in good condition, and within 72 hours of delivery. If you find a component missing or damaged please inform us immediately. We keep replacement components of most set parts and these can be sent out to you quickly. This will save you having to re-package and return the whole set, and allows you to continue with the project. (See separate parts list for component reference numbers)
- When storing prior to installation, the doors and frames should be handled with care and stored in a dry, ventilated building. Doors and frames should be stored flat and on a level surface (not on edge or on end).
- Should you need to store the doors before installation, they must still be fully inspected and checked for damage or faults and reported within 72 hours of delivery, repacking if necessary.
 Doors should not be stored or fitted in the building until the wet trades such as plastering, painting etc. have been completed and the room is dried out

Finishing prior to Installation

• See *Pre-finishing the wooden parts* – Very important: We do not recommend wax or oil finishing systems.

Trimming

• This internal folding sliding door set is not designed to be trimmed on site and should be fitted as supplied.

Conditions of Sale

• We shall not be held responsible for any incidental work expenses arising out of or because of any defect in our product, or bad workmanship to our product. In the event of the goods having manufacturing defects and requiring replacement, our liability will be limited to the value of the door or frame component only. These notes do not affect your statutory rights with the retailer of this product.

Maintenance

Hardware in buildings is subject to deterioration from everyday use, and also environmental attack due to atmospheric and other conditions. We require the following minimum maintenance to be followed otherwise the warranty shall be void.

Track and Bearings:

Using a spatula or similar (not your fingers), apply a small amount (typically a $\frac{1}{2}$ teaspoon of white petroleum jelly (Vaseline) or similar lubricant to the inner lip of each side of the track. Ensure that the wheels pass through the lubricant and it is distributed evenly along the track. Put additional lubricant around bearings. Lubricant reduces wear, improves smoothness and further protects against corrosion or track and bearings. Remove all surface contaminants by wiping all visible track surfaces with a damp soft cloth and mild detergent, then wipe clean with a clean cloth. In severe environments, apply a thin film of corrosion preventative such as WD40, by wiping with a soft cloth moistened with one of these products.

Stainless steel bearings are manufactured from hardening-grade stainless steel and although this material performs considerably better than plated steels, it is susceptible to corrosion unless maintained as described above.

Hangers, Pivots and Brackets:

A light spray application of a corrosion preventative such as WD40, followed by a light wipe with a dry cloth to remove excess, is recommended to all hangers, pivots and brackets. Exposed surfaces should first be wiped with warm soapy water and a soft rag, and then rinsed clean before applying preventative.

Hinges:

Wipe down the visible surfaces with warm soapy water on a soft rag and then rinse off by wiping with a clean damp rag.Application of a thin film of light machine oil or WD40 will help to maintain the original lustre of the metal finish. Be careful not to get these compounds on the timberwork itself as may cause staining.

Drop bolts:

Spray application of a suitable lubricant such as WD40 to the sliding pin inside the bolt and to the lock cylinder is recommended. A tube attached to the nozzle will help to concentrate the spray where you want it to go. There are access holes or slots on all drop bolt products so that this can be done without removing the locks from the doors.

Frequency:

The procedures mentioned above need to be carried out as often as is necessary to prevent deterioration in the installed environment, however we recommend the following minimum frequency of application: General environment - 6 monthly

Please be careful not to get the lubricants or other liquids above on the Timber components as may cause staining of the timber.

The properties of timber

No two trees produce identical grains or colour of wood and this adds to the beauty of a natural product. We therefore cannot guarantee that all doors and frame components will look exactly the same in grain and colour. Warping of wood is not a defect if it does not exceed 1/4 inch (6mm) in its installed position.

Maintaining the doors and frame

We suggest additional treatment and finishing may be required at least once a year or sooner if there is any indication of deterioration in the wood protective finish used.

Contents (1)

IMPORTANT: Please check the contents of the packages to ensure that all parts are present and in good condition before booking your installation

Timber parts

Door 1	1 -	Pivot	hinge	door -	quantity	7 1
Door 1	L -	Pivot	ninge	door -	quantity	/ 1

40-1L-06S-1	40-4L-06S-1	40PFW-1L-06S-1	40-1L-06SG-1
40-1L-07S-1	40-4L-07S-1	40PFW-1L-07S-1	40-1L-07SG-1
40-1L-08S-1	40-4L-08S-1	40PFW-1L-08S-1	40-1L-08SG-1

Door 2 - Middle door - quantity 1

40-1L-06S-2	40-4L-06S-2	40PFW-1L-06S-2	40-1L-06SG-2
40-1L-07S-2	40-4L-07S-2	40PFW-1L-07S-2	40-1L-07SG-2
40-1L-08S-2	40-4L-08S-2	40PFW-1L-08S-2	40-1L-08SG-2

Door 3 - Access door - quantity 1

40-1L-06S-	40-4L-06S-3	40PFW-1L-06S-3	40-1L-06SG-3
40-1L-07S-3	40-4L-07S-3	40PFW-1L-07S-3	40-1L-07SG-3
40-1L-08S-3	40-4L-08S-3	40PFW-1L-08S-3	40-1L-08SG-3

Door Size

1.8m (1790mm) wide Set - Door Size: 40mm x 572mm x 1981mm 2.1m (2090mm) wide Set - Door Size: 40mm x 672mm x 1981mm 2.4m (2390mm) wide Set - Door Size: 40mm x 772mm x 1981mm

Frame pack comprises of 1 x Top frame section (head) & 2 x Side frame section (jambs)

40-06SCL-4 40PFW-06SCL-4 40-07SCL-4 40PFW-07SCL-4 40-08SCL-4 40PFW-08SCL-4


Seals

Bubble seal R9885

2 metres x 4

AQ21 Draft seal AQ21B2.3

2.3 metres x 4

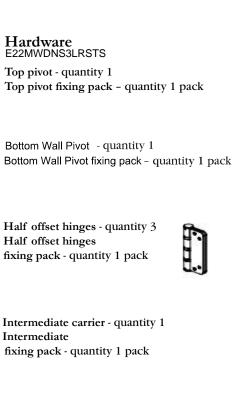

Straight Hinge - Quantity 2 Straight Hinge fixing pack - quantity 1 pack

DBMI100NRX Minuet drop bolt non keyed - quantity 2 Non-keyed drop bolt fixing pack - quantity 2 packs Includes drop bolt striker plates

DBMISPS Blank plate and driver pack - quantity 2 Blank plate fixing pack - quantity 2 packs

Optional extras

Magnetic catchesEWMPPlastic magnetic door holders- quantity 1 set

Metal door holder DDDS035 - quantity 1 set













Contents (2)



Pre-finishing the wooden parts- Unfinished oak sets only

After you have checked the parts list to ensure you have all the parts ready and all components are in good condition (replacement parts are available) please carry out the pre-finishing procedure specified.

Please do not proceed with installation or assembly before applying a bigb quality decorative wood coating like clear internal varnish or woodstain or paint to all the wooden parts as recommended below. It will be difficult for you to apply the wood coating correctly once the product is assembled and installed. Failure to totally finish the doors and frames will expose them to the ambient room conditions and will invalidate the guarantee.

- Apply at least 3 coats of the decorative protective wood coating to all faces, edges and the top and bottom of each door and the oak door frames, following the wood finish or paint company's recommendations.
- To enhance the 'Natural Oak' appearance use a clear or natural internal varnish or pu coating. If you require a different wood finish choose a wood stain with a varnish in it or, if using stain only, you need to apply 2 top coats of clear varnish on top of the stain to adequately protect the doors and frames.
- If any scratches occur during installation please apply another coating.
- We do not recommend wax or oil finishing systems.

Very Important: Do not use steel wool or allow steel or iron fragments to come into contact with the untreated oak timber as this will cause oxidisation resulting in black stains.

Deciding the brickwork or stud wall opening size and preparing the site

Assembled Frame Size


1.8m	1790mm Wide x 2054mm High
2.1m	2090mm Wide x 2054mm High
2.4m	2390mm Wide x 2054mm High


Brick / Stud wall opening

1.8m 1800mm Wide x 2064mm High

2.1m 2100mm Wide x 2064mm High

2.4m 2400mm Wide x 2064mm High




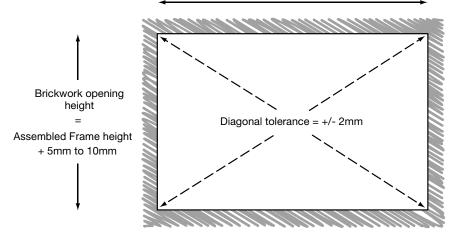

1 Identify the left and right jambs and frame head.

Lay a protective covering on the floor and lay out the frame on the floor with the head, left jamb and right jamb in position.


Ensure the thinner 28mm edge of the frame jamb is upright pointing towards you and the 43mm wider edge is on the floor.

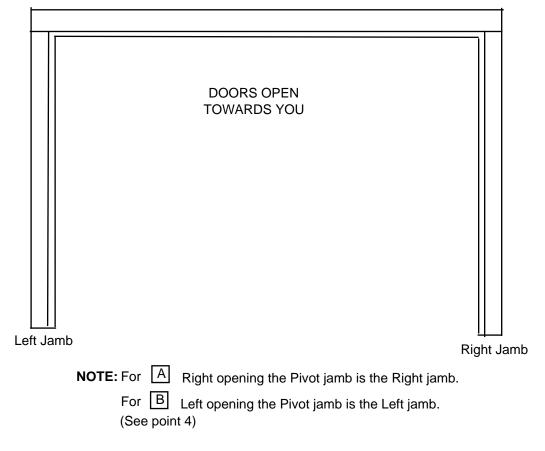



2a Select the pivot frame jamb (Depends on which opening direction you choose. See 1 and 4) Also locate the METAL TEMPLATE in the hardware pack. Place the template TIGHT against the rebate and up to the Door Stop and level with the bottom of the frame jamb. Mark the 3 holes in the template onto the frame jamb.

Note:


The Template is slightly wider than the frame.

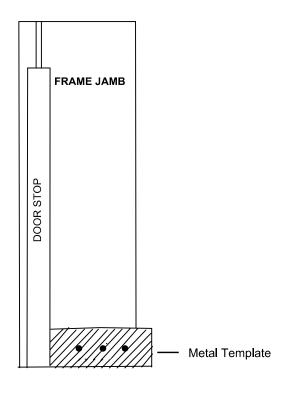



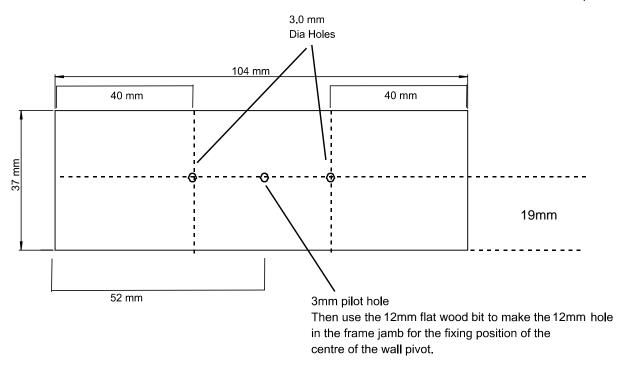


Preparing and Assembling the frame

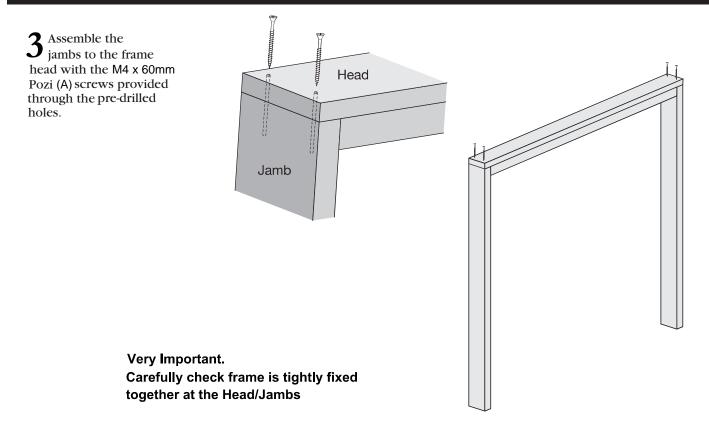


Opening options

4 Choose the opening direction before installing the frame. The internal door set is reversible, with left or right opening options. Before fixing the frame into the opening or fitting the doors, choose the direction you wish the doors to open. This will determine which instructions, **A** or **B**, to follow and which door to fit first.

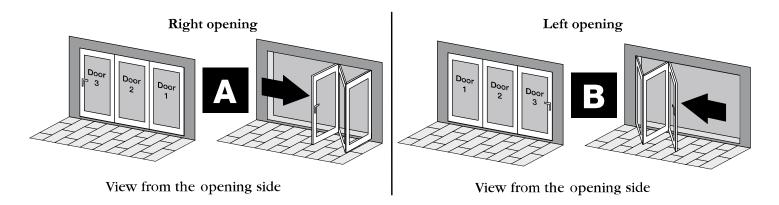

Follow the appropriate instuctions for your choice of opening. Follow **A** for Right opening. Follow **B** for Left opening.

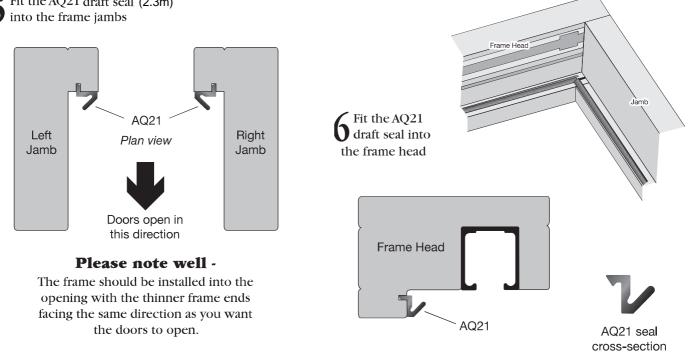


Installing the assembled frame


Н

Proceed to install the assembled frame. It is critical that the frame is fitted square and level with tolerances as follows. Ensure the frame is installed straight and square, if necessary use shims (packers) between the frame and the brick opening.

The height (H) must be the same across (Height of opening) the whole width of the opening, +/- 2mm.

The diagonals must be the same, +/-2mm.

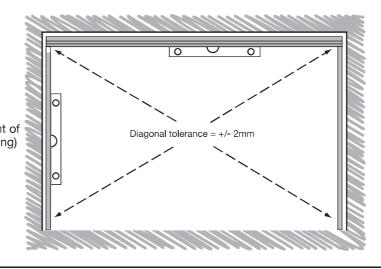

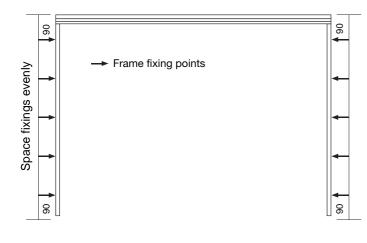

Secure both Jambs into the brick work/stud wall opening with 5 fixings - evenly spaced - using the direct frame fixings (C) provided for brick work and screws (B) for a stud wall.

IMPORTANT TIP.

Drill the frame jamb fixings behind where the doors are, so the holes can only be seen when the doors are open.

For brick work

Use the *direct frame fixings* (C) as follows: 1) Use the 6.5mm x 148mm (D) HSS drill (supplied) to drill holes in frame jambs, aluminium track and steel.

2) Use the 6.5mm x 160mm (E) SDS masonry drill (supplied) to drill into brickwork.

3) Use the Torx T30 bit (F) (supplied) to screw in the direct frame fixings (C).


4) Cover the screw heads using the white or oak cover caps (G)

Assembling the top track




Instructions for Right opening


8a Remove the two transportation screws to release the aluminium top track from the frame head.

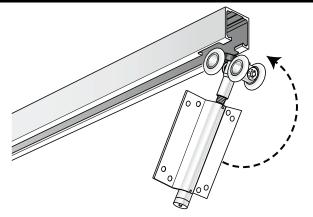




Slide the intermediate carrier wheels into the track.

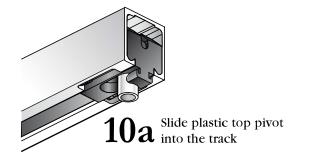




11a Re-secure the top track to the frame head using the two transportation screws *only* at this stage. *Important - The track access slot is on the right when viewed from the opening side.*

Assembling the top track

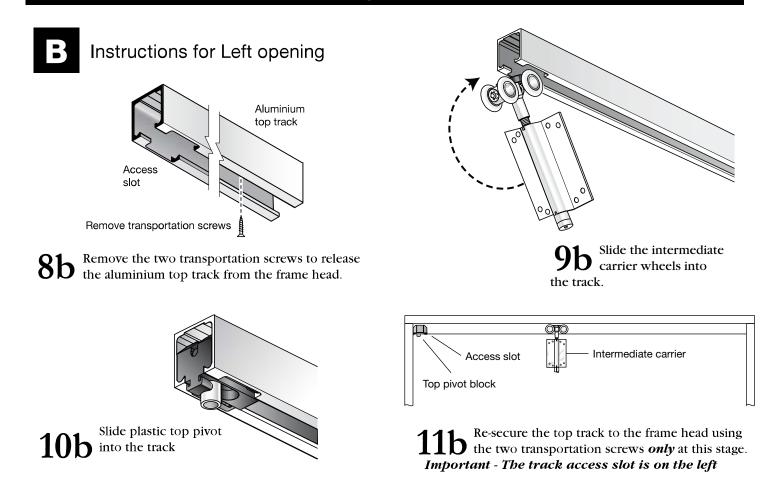

Assembling the top track and top and bottom pivots (continued)

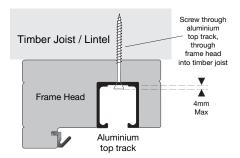

The aluminium top track, which is temporarily held in place with transit screws, has been pre-drilled for fixing points into the lintel or timber joist.

The aluminium track must be securely fixed, through the head of the frame, into the timber joist using the woodscrews provided (B) or lintel using the frame fixings (C).

1) Locate the pre-drilled holes in the aluminium top track


For fixing to a lintel

2) Use the 6.5mm x 148mm (D) HSS drill (supplied) to drill through pre-drilled holes, through timber frame head and into the lintel, use the frame fixings (C) to screw through the aluminium top track, frame head and into the lintel.

For fixing to a timber joist


3) Use the M4 x 80mm (B) screws provided to screw through the aluminium top track and frame head into the timber joist.

Assemble top pivot block. **3a** Slide and click cover plate onto the pivot block. Screw through cover plate into rear of access slot.

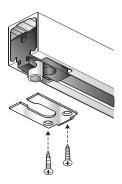





13b Fix the bottom pivot pin only (not the hinge) Into the frame jamb, securing with screws provided, into the holes you drilled in Step 2.

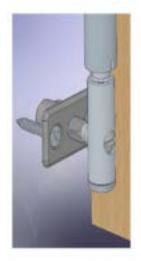


Overview of door and hardware arrangement

Choice A for Right opening

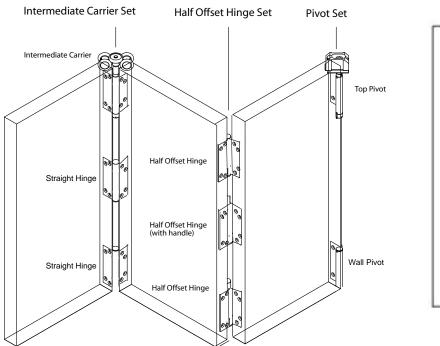




Choice B for Left opening

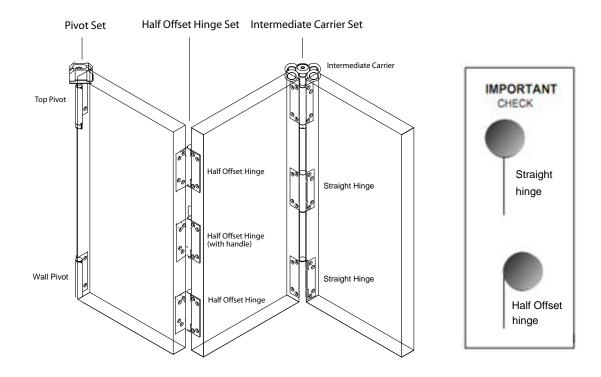

Fitting the dropbolts

14 Fit the Minuet drop bolt to the bottom of door 1 using the pre-cut position.

Fit the Minuet drop bolt to the top of door 1 using the pre-cut position.

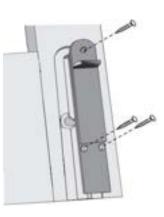

15 Fit the drop bolt striker plate to the frame head in the pre-cut position.

Use the blank plates to cover the unused pre-cut positions.



200

Special Note

To use the bottom drop bolt it will be necessary to make a locating hole in the floor, to be covered by the striker plate. Using the bottom drop bolt provides greater rigidity when the doors are closed and this is our recommended installation method.


If however if it is preferred the bottom striker plate and hole are NOT drilled and fixed into the floor, leaving the bottom minuet drop bolt unused.

This installation will leave the floor completely clear, but the doors are less rigid when closed and during operation.

Fitting the pivot door (door 1)

Before fitting door 1 thoroughly clean the top and bottom tracks


16 The top pivot default is for left opening. For right opening, carefully remove centre bolt from hinge barrel then re-insert from the other end.

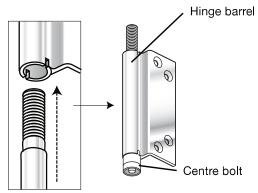


f 18 Remove the hinge plate from the bottom wall pivot.

Position the hinge plate into the rebate at the bottom edge of Door 1 and slide it up the door until the bottom of the hinge plate is 34mm up from the bottom edge of the door. Carefully mark the hole position of the hinge plate onto the edge of the door. Drill pilot holes using the 3mm Drill provided then fix the hinge plate with the Torx head screws provided.

17 Fix the top pivot hinges to door 1. Fix the pivot hinges 15mm from the top of the door to the outer edge of the hinge plate. Drill pilot holes and use the screws provided to secure the pivot hinges into the rebate on the edge of the door.

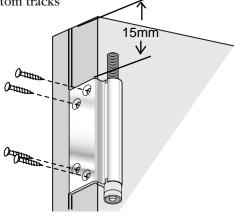

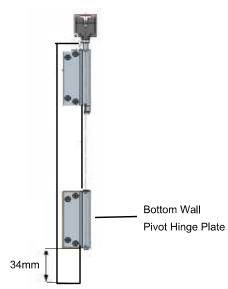


Fitting the pivot door (door 1)

20

Adjust alignment of pivot door as shown. Leave a 7mm

gap between the door edge and the frame jamb.


19 Lift the pivot door onto the bottom wall pivot. Support the door then screw the top pivot centre bolt into the pivot block until the door swings freely.

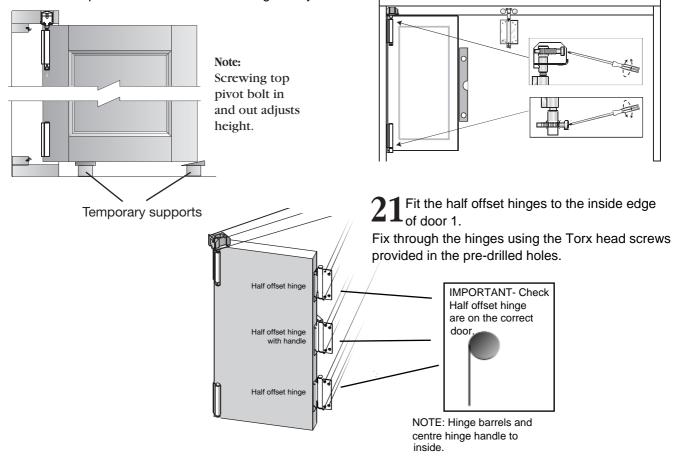

Fitting the middle door (door 2)


22 Lift door 2 and locate the intermediate guide in the bottom channel. Support door on blocks then screw top carrier bolt into top wheel assembly.

Finally fix door 1 and 2 together using the half offset hinges in the machined position, using the Torx head screws provided. Note: Handle to the inside.

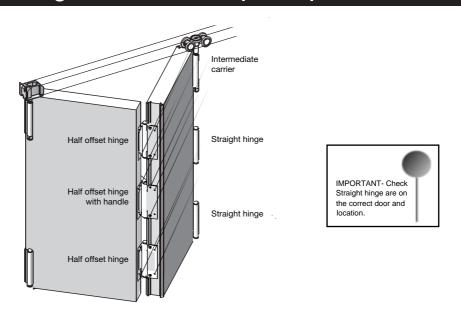


Fitting the access door (door 3)

23 Attach door 3 to the Intermediate Carrier and Straight hinges in the pre machined positions using the Torx head screws provided.

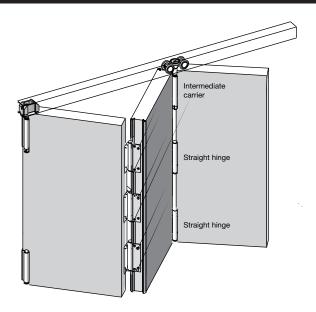


Fitting the draft seals to the doors

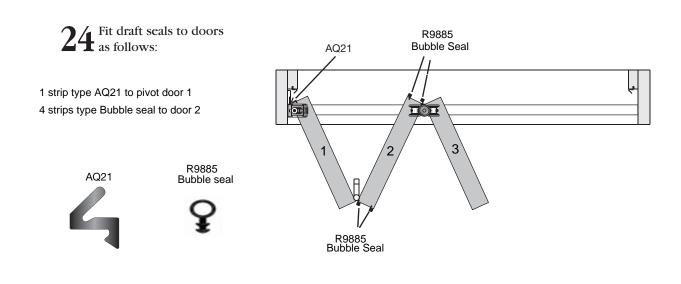



Adjusting the operation of the doors

25 Raise or lower the height of the doors by adjusting the top pivot and intermediate carrier. Insert the Allen Key provided then turn clockwise to raise and anti clockwise to lower the doors.

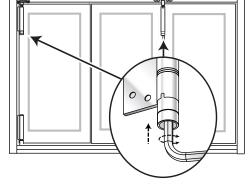


26 Adjust the top and bottom pivots to move the doors left or right.



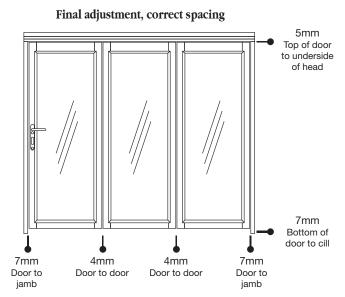

Fitting the mortice latch

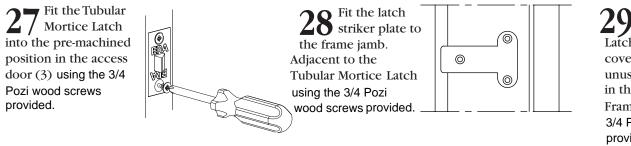

29 Fit the Blank Latch Plate and keep cover to cover the unused machining in the pivot side Frame Iamb using the 3/4 Pozi wood screws provided.

Fitting the catches to the doors

OPTIONAL EXTRAS

